

PR Series Torque Converter Installation Guidelines

The PR Series of transmissions requires an hydraulic torque converter to match driving torque to load and grade. All PR Series transmissions are designed to use a standard eleven-inch (280mm) torque converter. Proper installation is essential for reliable operation.

The installation drawing below should be used as a guideline for torque converter installation. Dimension "A" must be maintained to insure a recommended nominal tang engagement. For illustration purposes a standard eleven-inch (280mm) torque converter was used.

